




Belkin NetCam HD Lens Piece Replacement

This guide will show you the steps in replacing the lens piece in your Belkin NetCam HD+.

Written By: Destinie DiazVerdejo

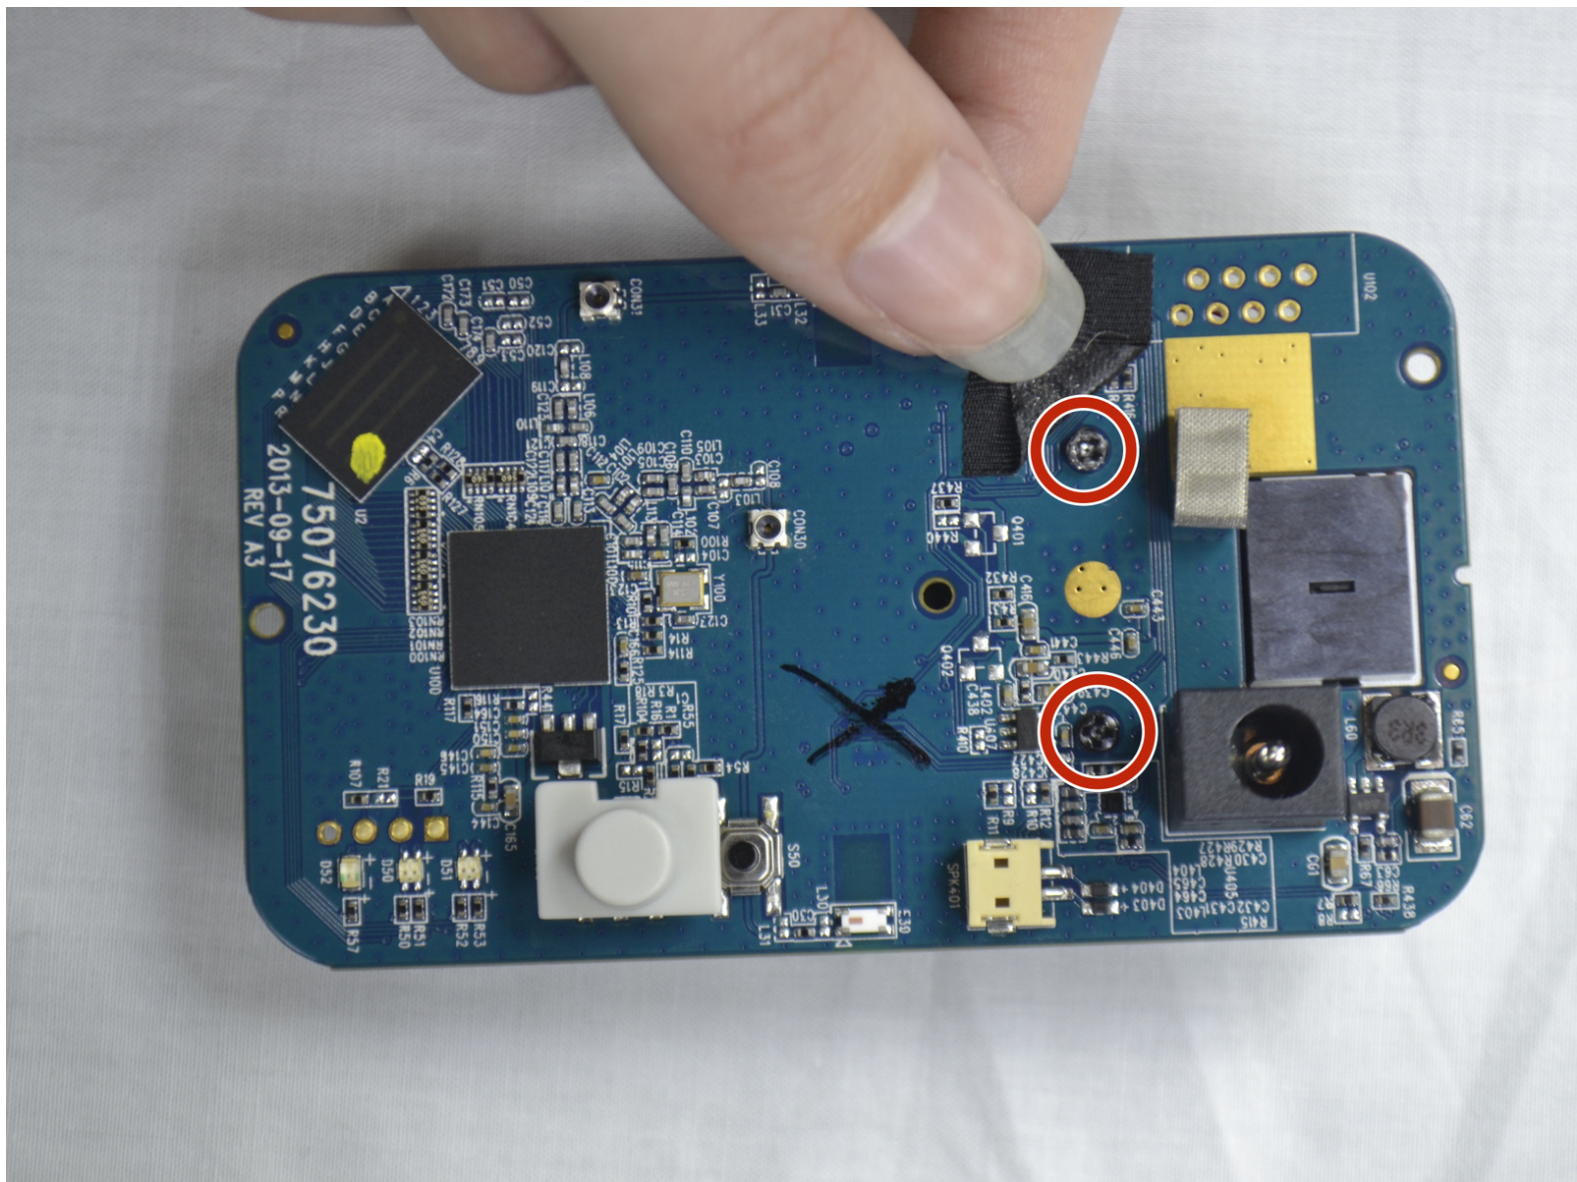

INTRODUCTION

This guide will walk you through how to replace the lens piece on the NetCam.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Adjustable Wrench](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Case




- Use a wrench to loosen up the stand from the back in order to hold the NetCam more comfortably.

Step 2



- Work a plastic opening tool into the seam and pry the face plate away from the back panel.


Step 3

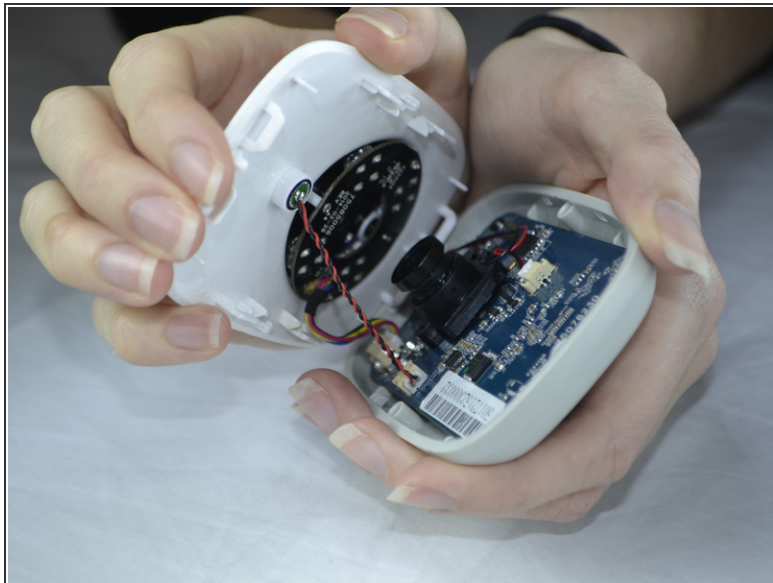

- Use pressure to separate the covers.


⚠ When pulling the device apart, separate from the bottom up in order to avoid pulling the wiring at the top apart.

Step 4 — Front Casing

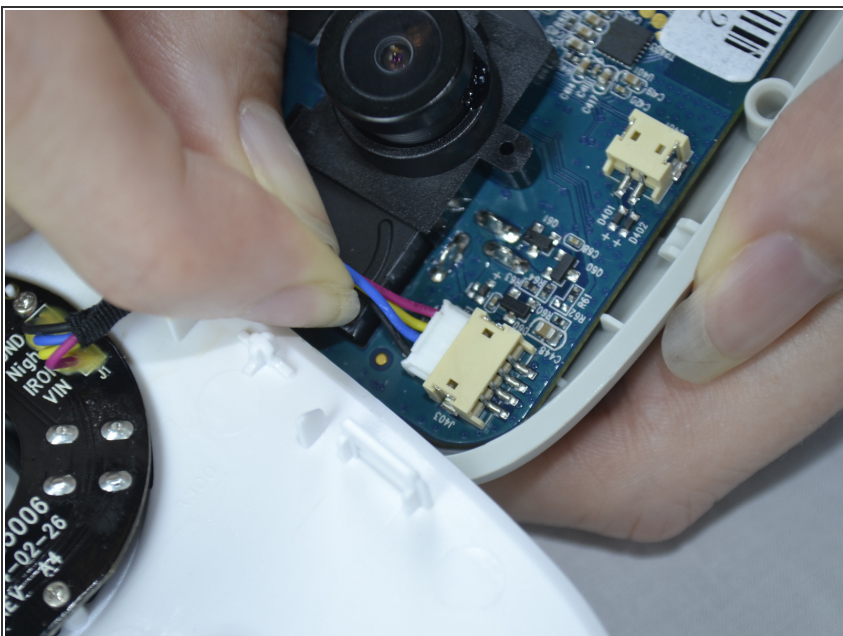



- Carefully use your fingers to gently pull out the white attachment from the tan colored part.

Step 5 — Speaker

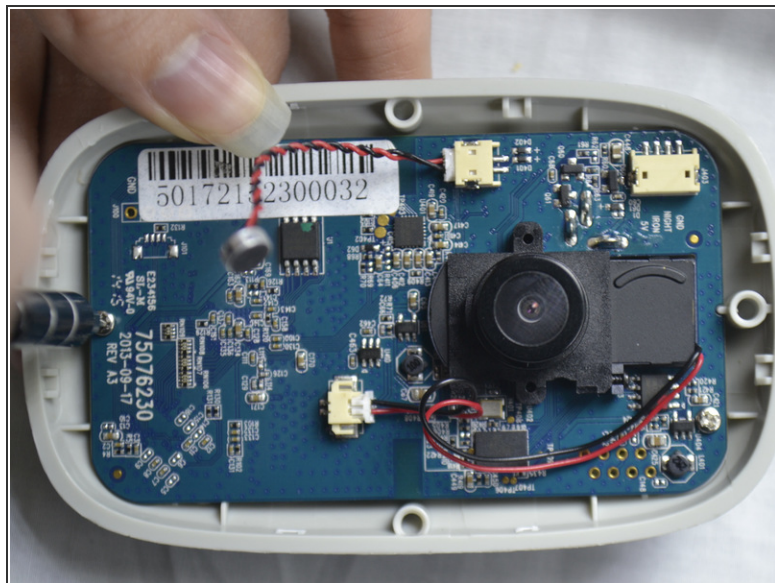

- Use a Phillips #0 screwdriver to take out the two 1.2 mm screws on the board.

Step 6

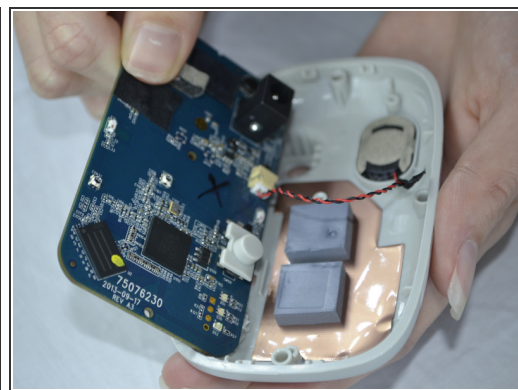
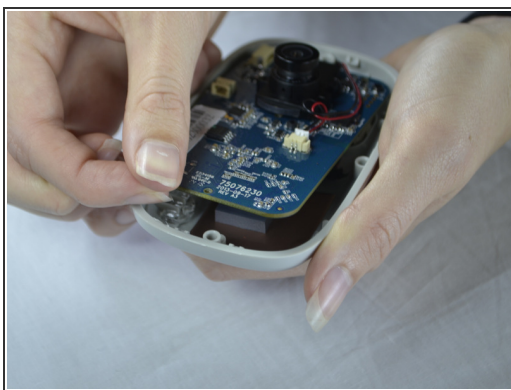


- With your fingers, pull the circuit board out of the back casing.




When pulling the board up be sure to do so carefully so you do not break the cord which is attached on the back side.

Step 7

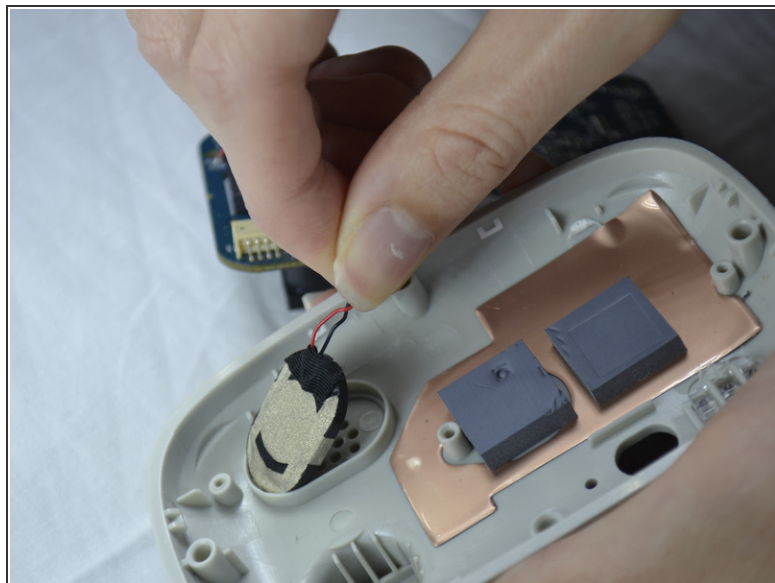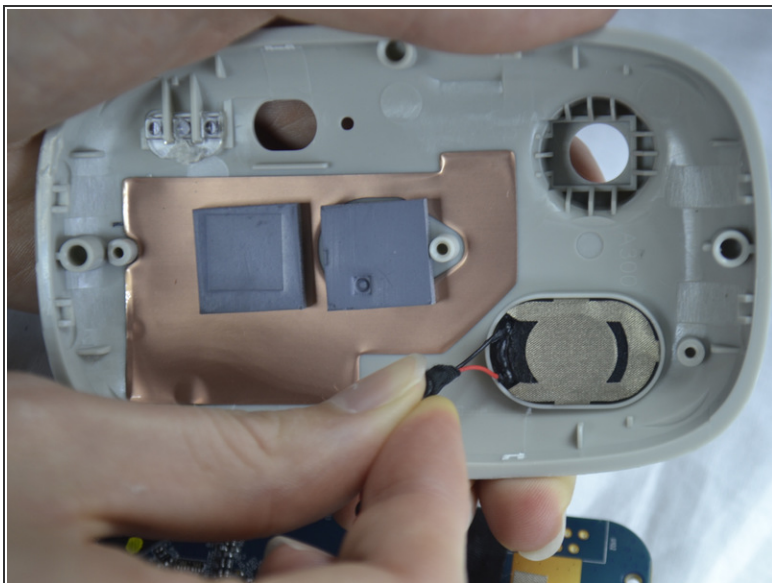



- Gently pull the speaker out of the holder from the back of the cover.

Step 8

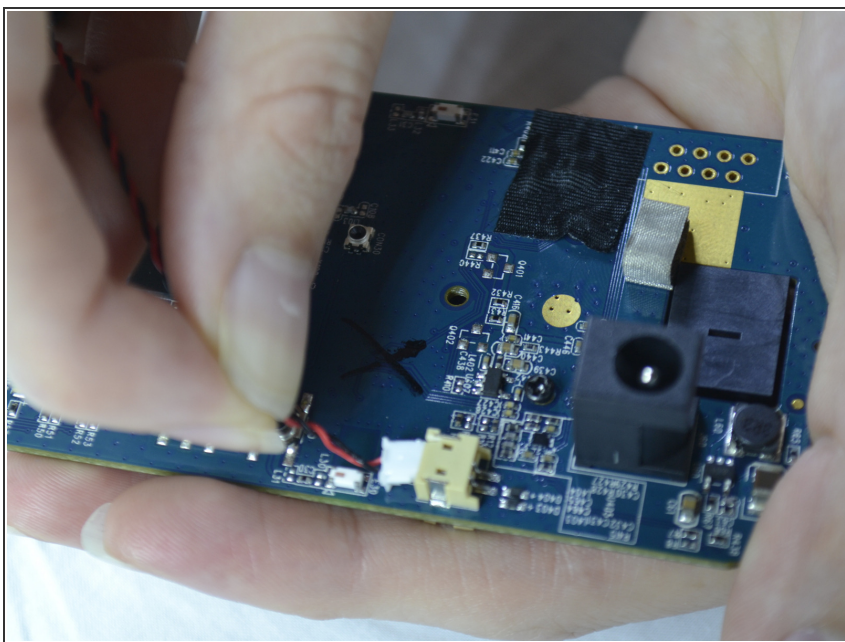



- The speaker wires are attached with the board. It can be unattached gently by pulling out the white attachment from the port.

Step 9 — Lens Piece

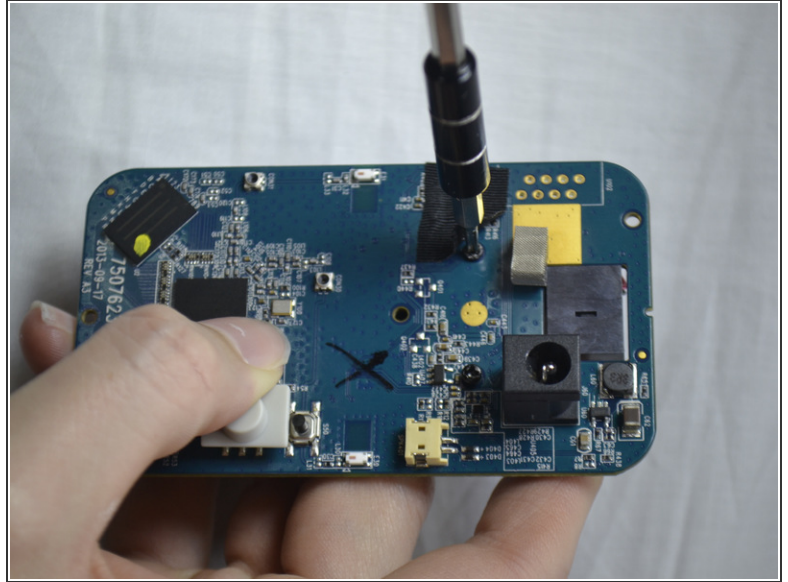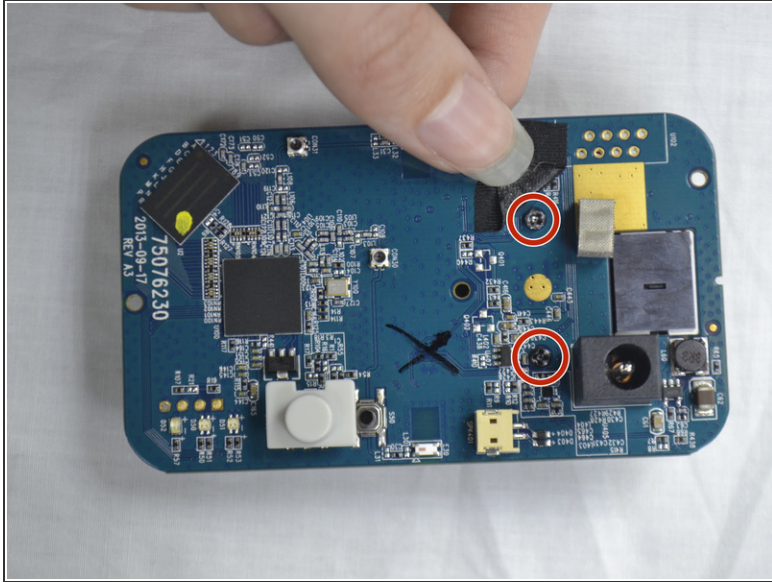


- Flip the circuit board to the back side.
- Fold down the tape with your finger.
- With the Phillips #0 screwdriver, unscrew the two 1.2 mm screws.

Step 10

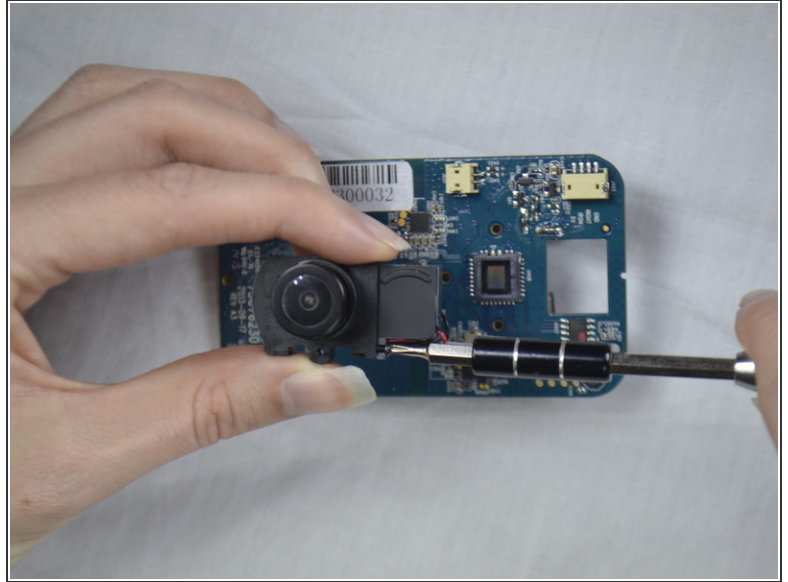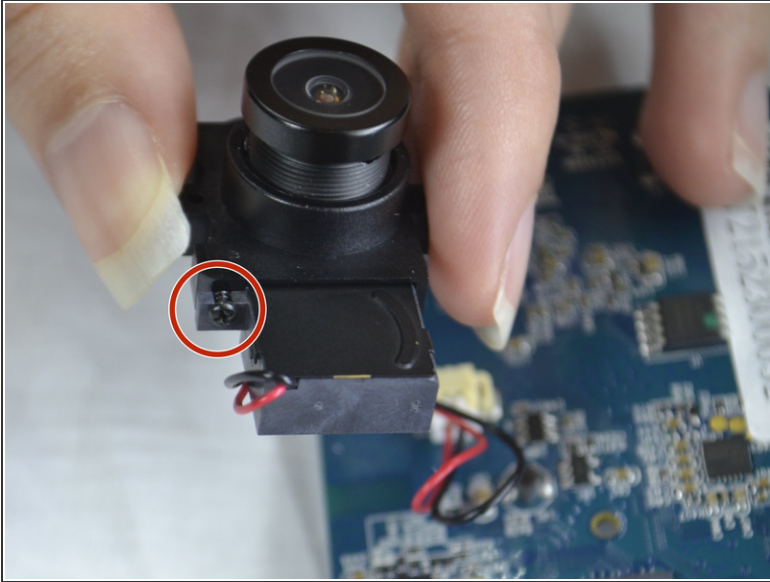



- Flip the circuit board back to the other side.
- Unscrew the screw with a Phillips #0 screw driver.

Step 11

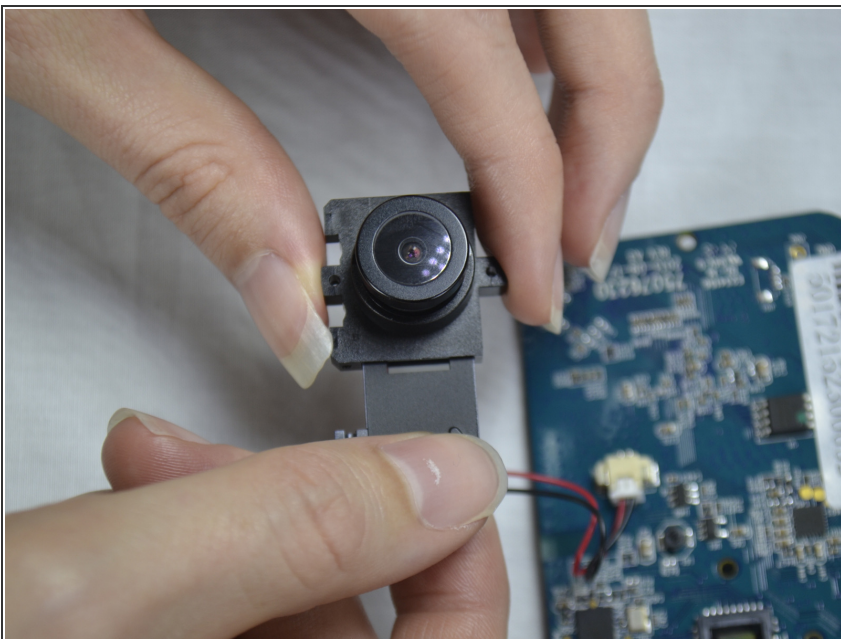

- Slide the attached piece from the lens holder device.

Step 12

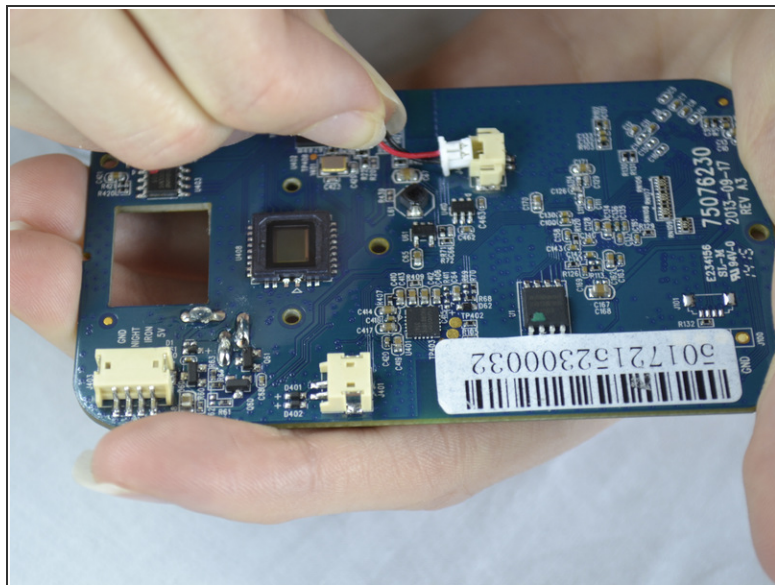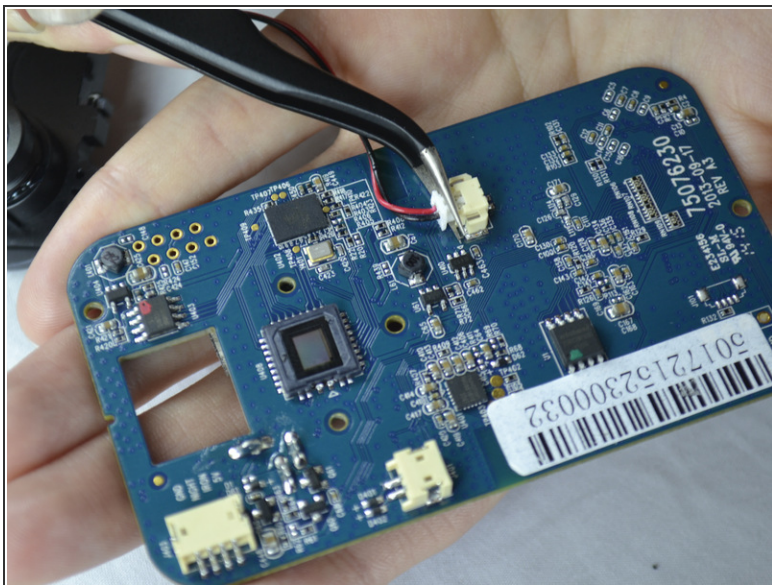

- Use the tweezers to pull the white attachment out from the port a little.
- Then, take your fingers and gently pull the white attachment out from the tan port.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 01:02:53 PM.